



	spare part no
① BOTTOM PLATE	
③ OUTLET END PLATE	368030
⑤ WARM AIR OUTLET GRID HOLDER	
⑦ T3 OVERHEATING CUT-OUT SWITCH (SN → 21499) (SN 21500 →)	362404 362405
⑨ SIDE PROFILE	
⑪ HEAT EXCHANGER	368507
⑬ GLOW PRIMER WITH GASKETS	360100
⑮ WICKPOT	367305
⑰ BURNER BOTTOM	369002
⑲ BOTTOM LOCK FOR OUTER CYLINDER	
⑲ FUEL RETURN & VENT CUP CONNECTOR, COMPLETE	367114
⑲ RUBBER BUSHING FOR FUEL SUCTION TUBE	
⑲ FUEL RETURN TUBE, POLYAMID, BLACK	367212
⑲ HOSE CLAMP	
⑲ CONNECTOR NUT FOR FUEL PUMP	
⑲ CONNECTOR NUT FOR FUEL PUMP	
⑲ MAIN BLOWER ROTOR	365205
⑲ MAIN BLOWER LOCK PLATE	
⑲ COMBUSTION BLOWER MOTOR & ROTOR, CLOSED ASS.	365303
⑲ LED SIGNAL LAMP	

	spare part no
② NUT HOLDING BOTTOM PLATE	
④ BACK END PLATE	
⑥ WARM AIR OUTLET GRID (PLASTIC)	
⑧ T1 THERMISTOR WITH COPPER CONDUCTOR	362409
⑩ TOP PLATE WITH COMBUSTION AIR CONNECTION	
⑫ BURNER CONE WITH MOUNTING PLATE & OUTER CYL.	
⑬ BURNER CYLINDER (HOLE CYLINDER)	369004
⑬ WICKPOT HOLDER RING	
⑬ BURNER BOTTOM HOLDER (PROPELLER)	369001
⑲ NUT HOLDING OUTER CYLINDER BOTTOM	
⑲ FUEL SUCTION TUBE, POLYAMID, TRANSPARENT	367211
⑲ FUEL RETURN FITTING/TUBE CONNECTOR NUT	
⑲ FUEL RETURN FITTING RUBBER PROP	
⑲ ALUMINIUM TUBE FOR COMBUSTION AIR FEEDING	369006
⑲ FUEL PUMP, FC 4	367504
⑲ MAIN BLOWER MOTOR (SN 4223 →)	365104
⑲ MAIN BLOWER HOUSE PROFILE	
⑲ MAIN BLOWER BASE PLATE	
⑲ CONTROL UNIT	361011
⑲ TOGGLE SWITCH	362204